

## ROBY ARCH

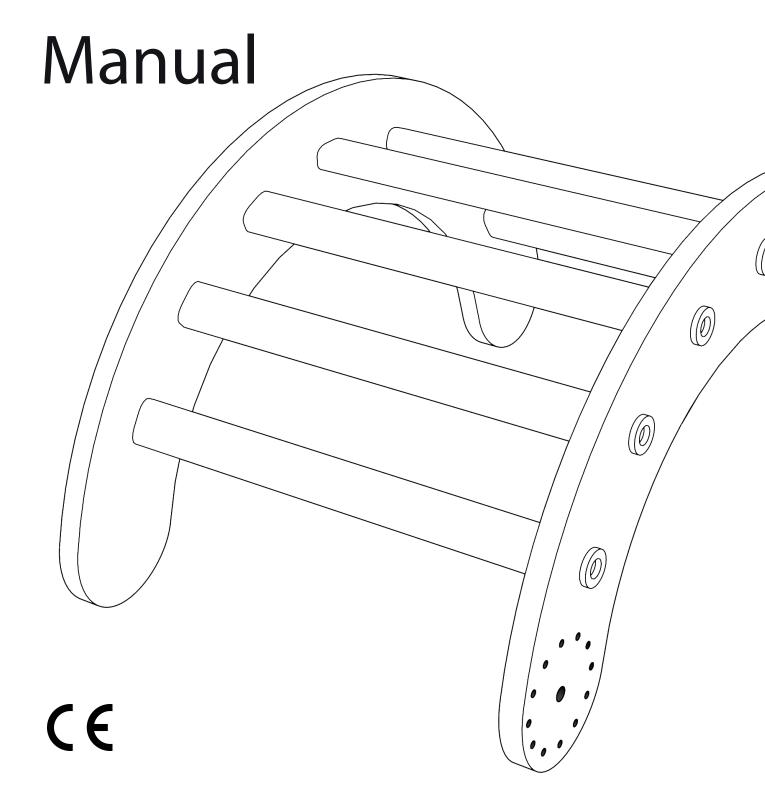





## CONTENTS


- **A** 2x20mm screw **x14**;
- $\mathbb{B}$  Z-type hex screwdriver  $\mathbf{x1}$ ;
- C Crossbar x7;
- $\bigcirc$  Side planks **x2**;

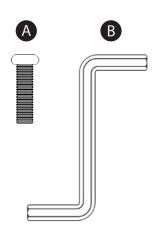

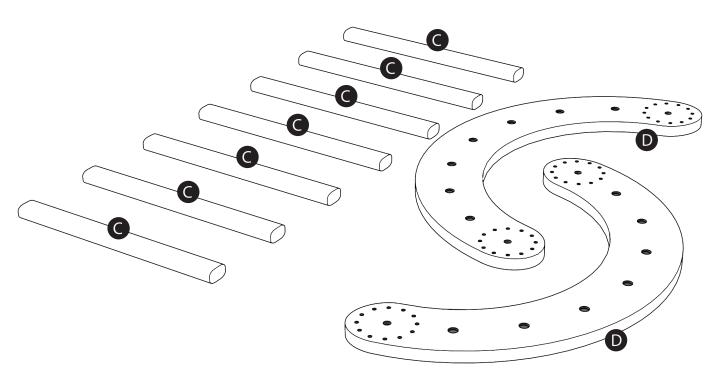

## MANUAL

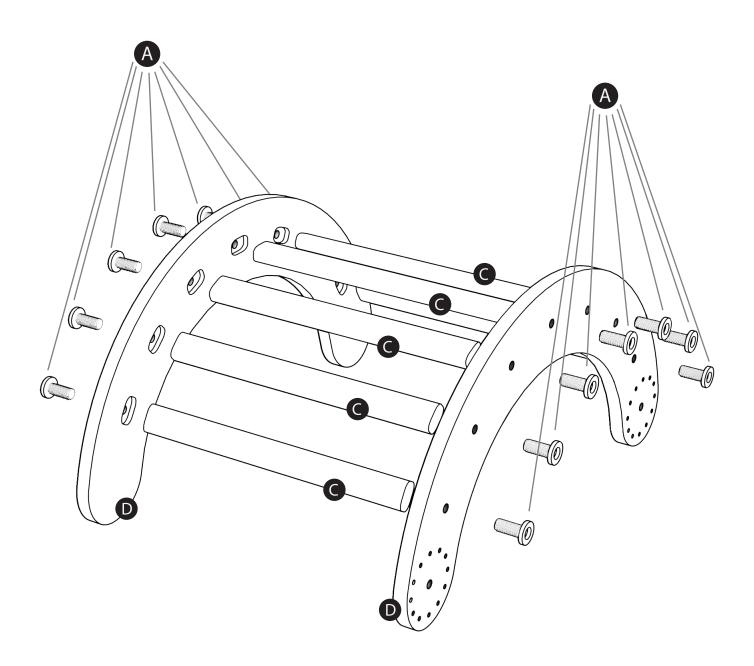

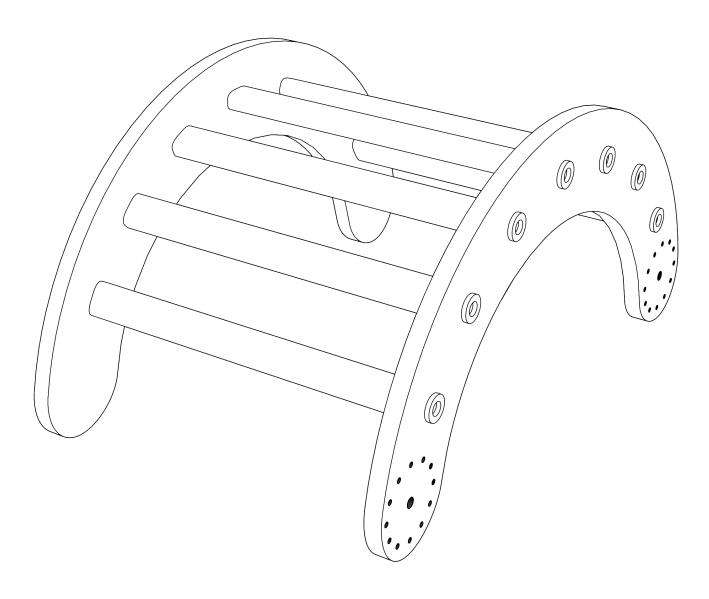

This is the only recommended way to assemble the product. You assume full responsibility for the use of the product, its modifications and connections, all legal, medical or financial obligations that may arise from the sale and use of Roby Kids brand products. Recommended children age using this toy: six months to five years. Warning. Only domestic use

