

## ROBY LARGE

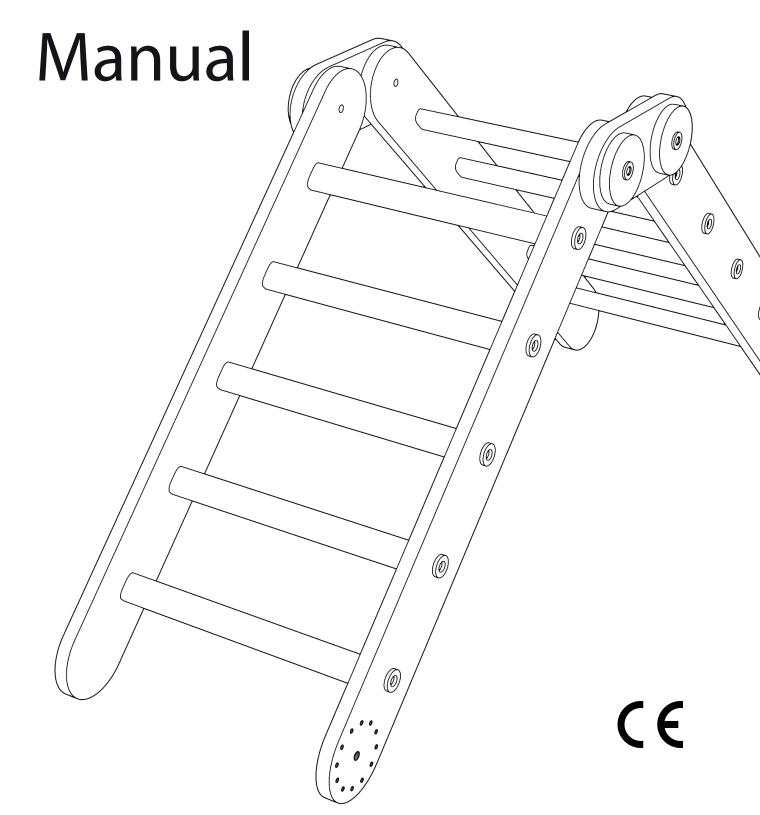





## CONTENTS

- **A** 2x20mm screw **x20**;
- **B** 2x40mm screw **x4**;
- C Z-type hex screwdriver x1;
- Crossbar x10;
- E Long side planks x4;
- Connecting "pucks" x4;
- G Connecting joints x2;

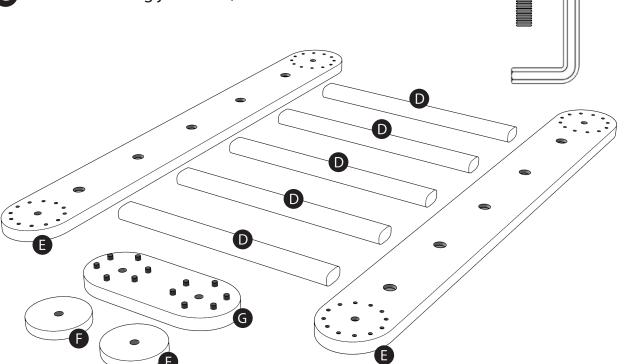

0

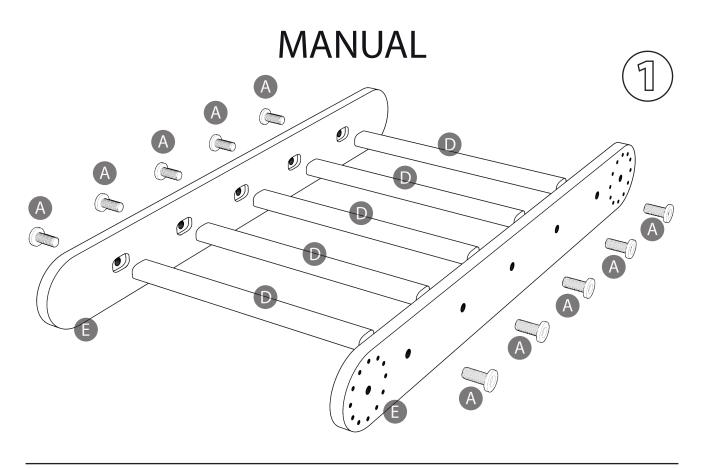

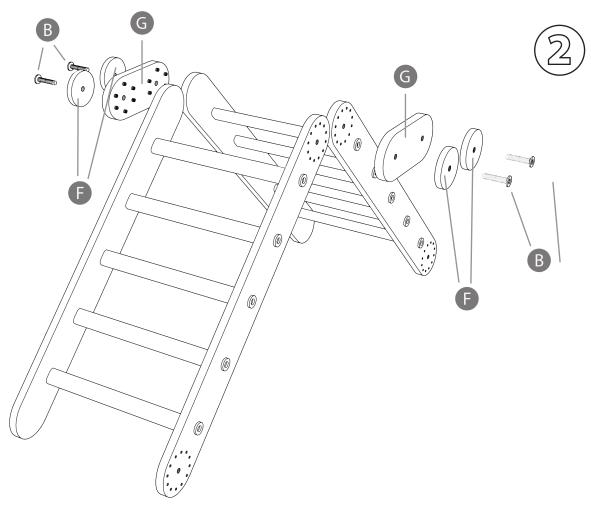



This is the only recommended way to assemble the product. You assume full responsibility for the use of the product, its modifications and connections, all legal, medical or financial obligations that may arise from the sale and use of Roby Kids brand products. Recommended children age using this toy: six months to five years. Warning. Only domestic use

