


ROBY SLIDE


Manual

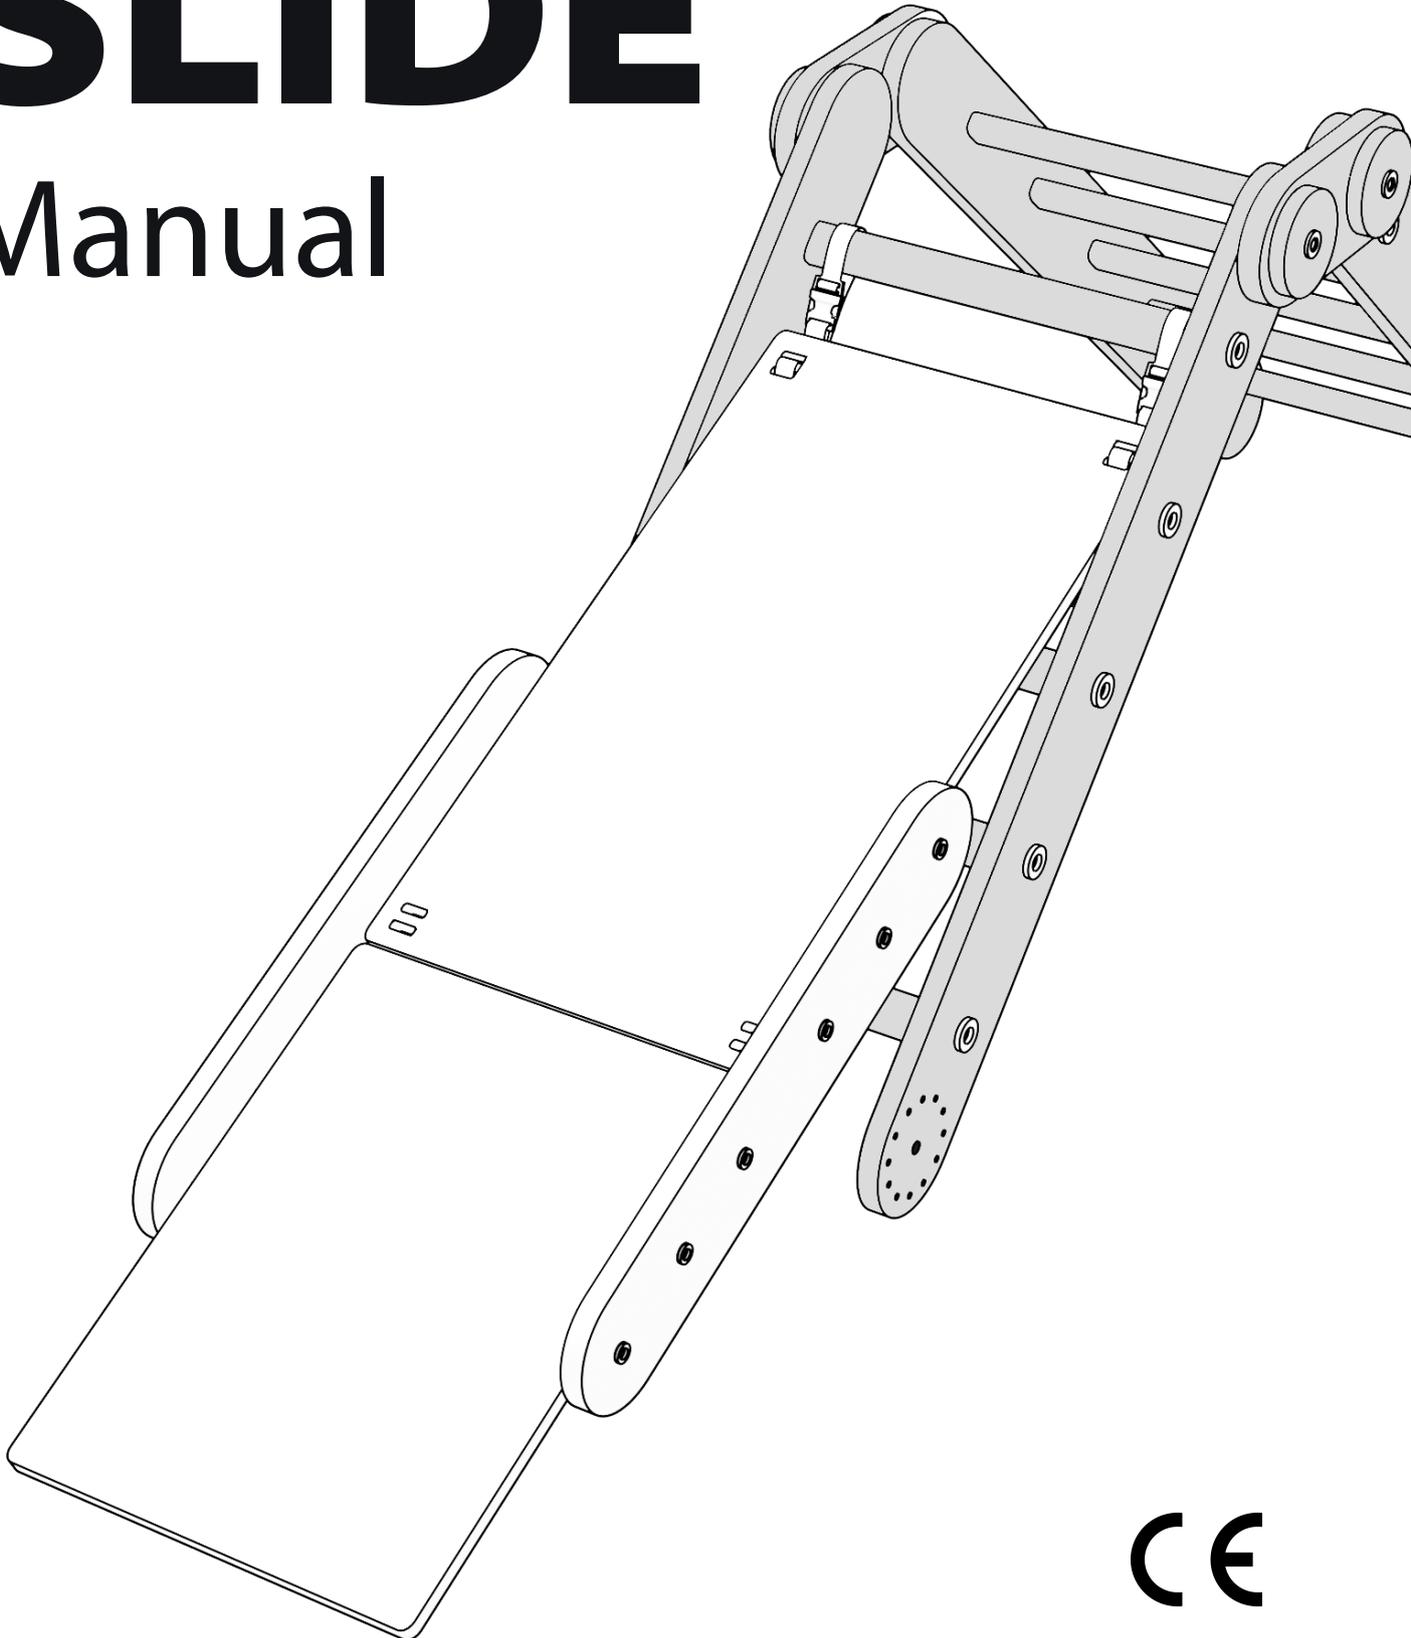



CE

CONTENTS


- A** — 2x30mm screw **x12**;
- B** — Z-type hex screwdriver **x1**;
- C** — Side planks **x2**;
- D** — Long slide plank **x1**;
- E** — Short slide plank **x1**;
- F** — Plastic buckle **x2**.

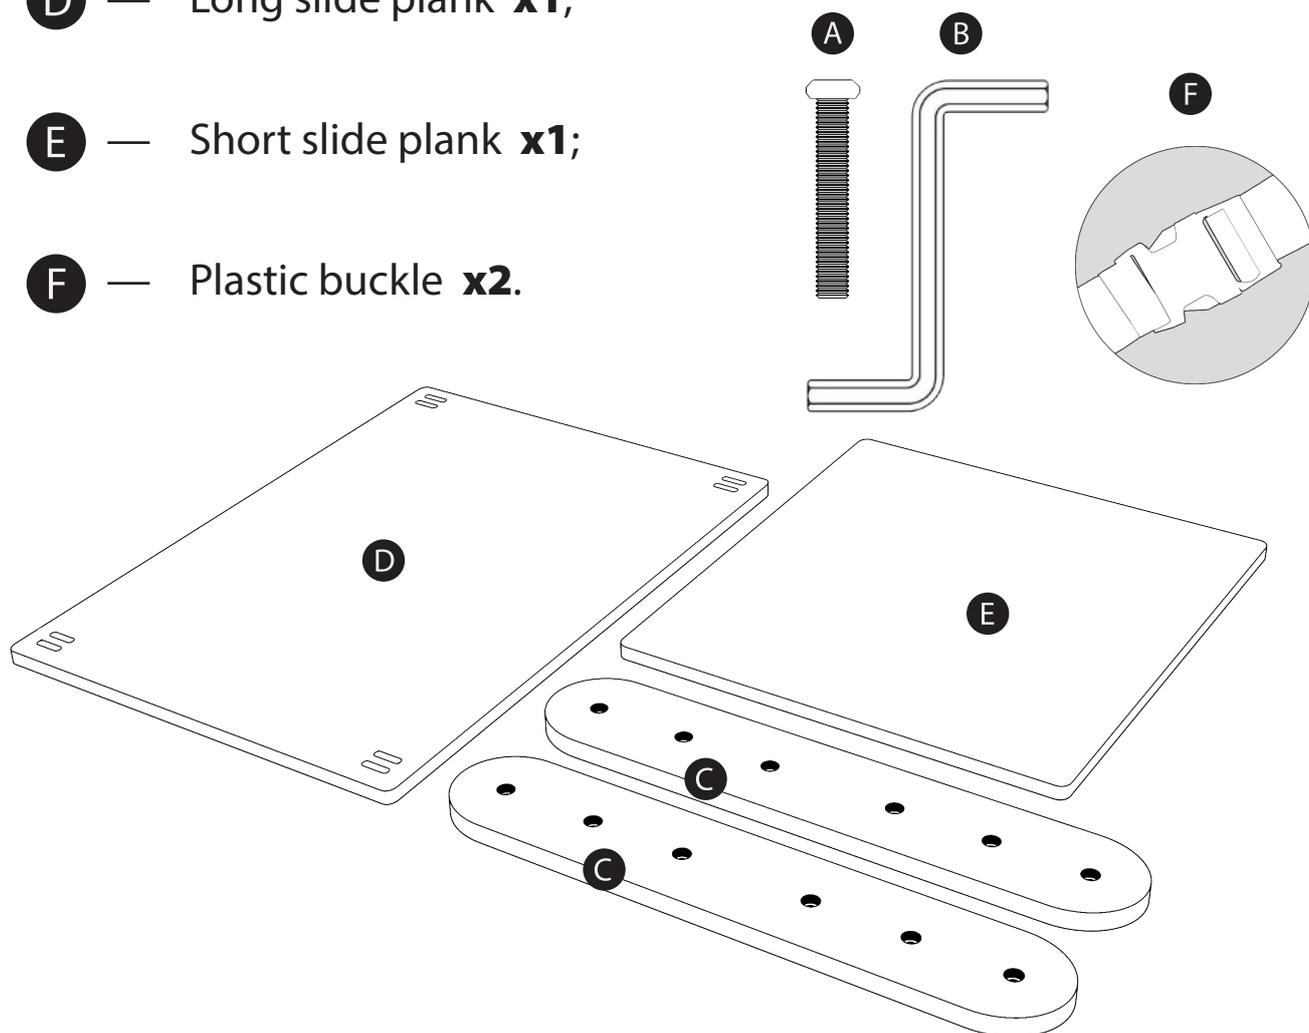

MANUAL

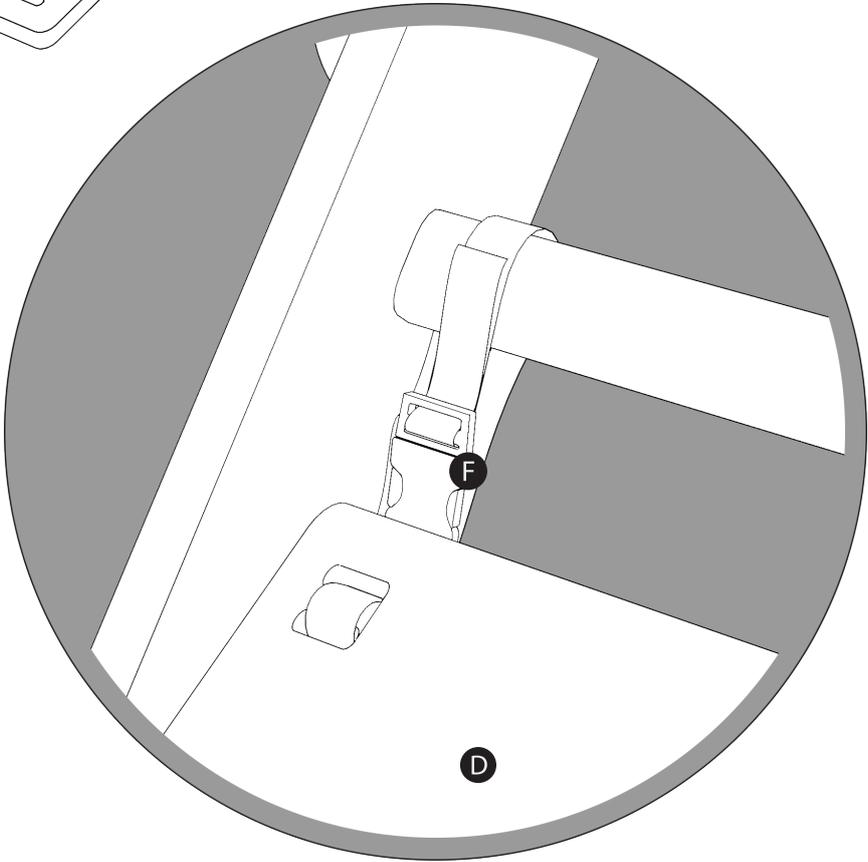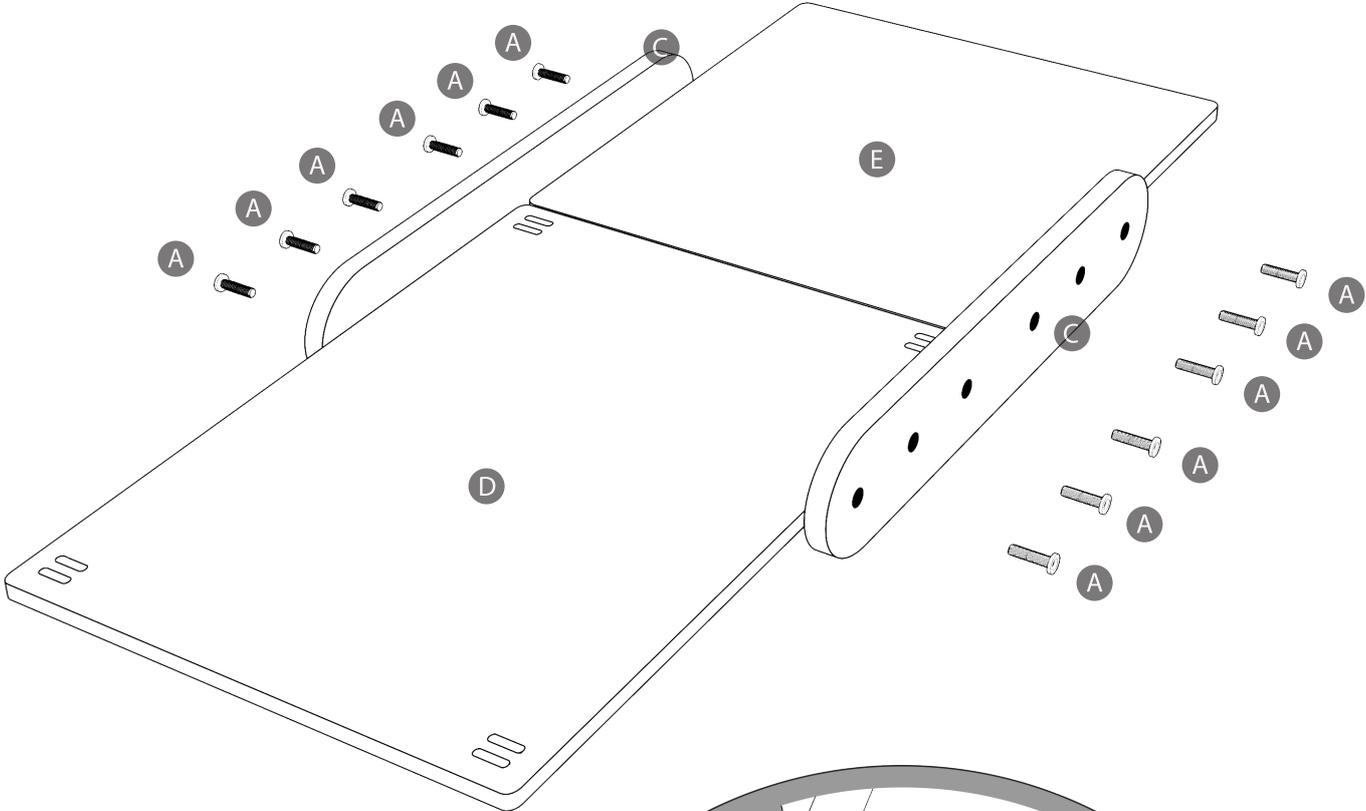

CE

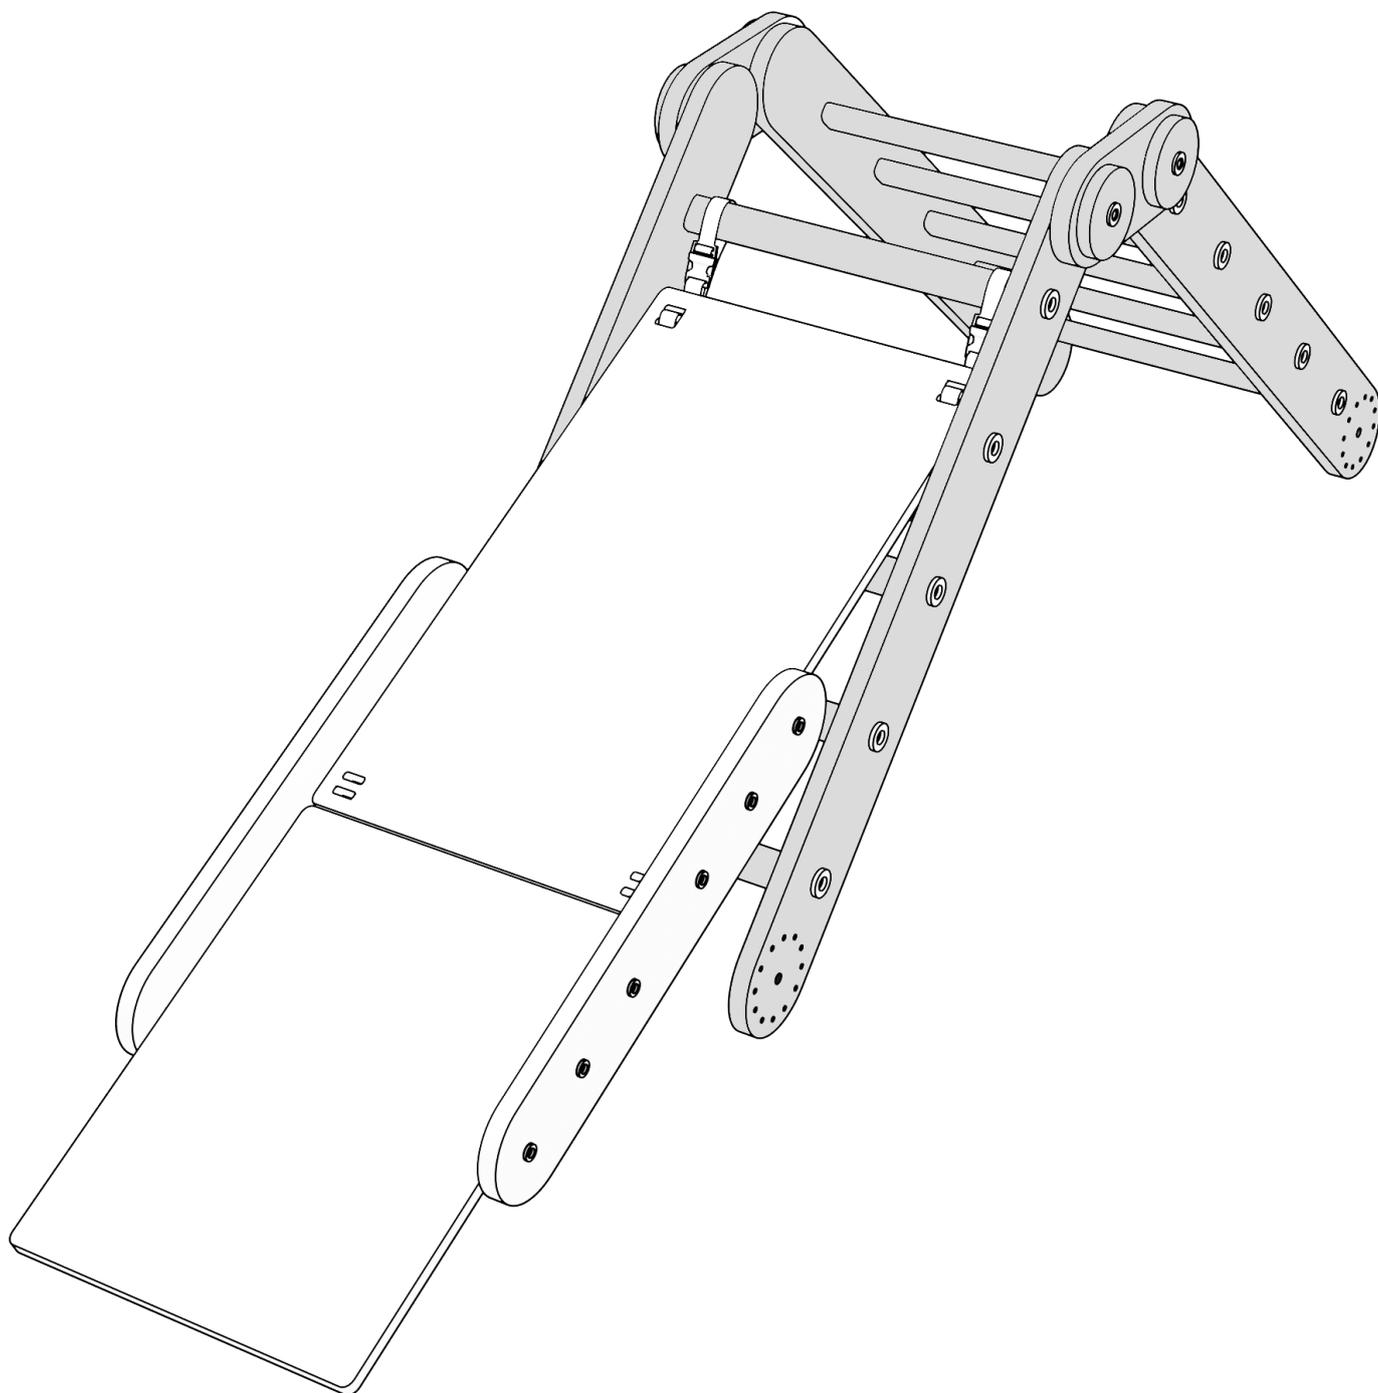

This is the only recommended way to assemble the product. You assume full responsibility for the use of the product, its modifications and connections, all legal, medical or financial obligations that may arise from the sale and use of Roby Kids brand products. Recommended children age using this toy: six months to five years. **Warning. Only domestic use**

 **ROBY
KIDS**